


# KOHLER®

## PRO 3.7, PRO 3.7 E, PRO 5.2, PRO 5.2 E, PRO 7.5, PRO 7.5 E Generator Service Manual

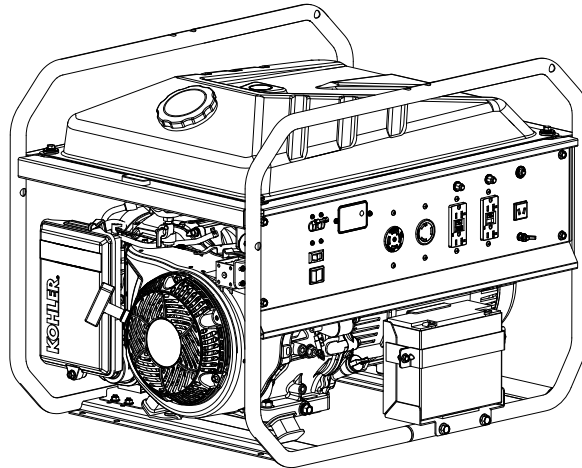

---

**IMPORTANT:** Read all safety precautions and instructions carefully before operating equipment.  
Ensure equipment is stopped and level before performing any maintenance or service.  
For all engine related maintenance, disassembly and reassembly, refer to service manual of engine powering this equipment.

---


2	Safety
3	Specifications
6	Troubleshooting
9	Electrical System
14	Disassembly/Inspection and Service
16	Reassembly


# Safety


## SAFETY PRECAUTIONS


- ⚠ DANGER:** A hazard that will result in death, serious injury, or substantial property damage.
- ⚠ WARNING:** A hazard that could result in death, serious injury, or substantial property damage.
- ⚠ CAUTION:** A hazard that could result in minor personal injury or property damage.


NOTE: is used to notify people of important installation, operation, or maintenance information.


	<b>⚠ WARNING</b>
	Explosive Fuel can cause fires and severe burns. Do not fill fuel tank while engine is hot or running.
Gasoline is extremely flammable and its vapors can explode if ignited. Never refuel while smoking or in vicinity of an open flame. Store gasoline only in approved containers, in well ventilated, unoccupied buildings, away from sparks or flames. Spilled fuel could ignite if it comes in contact with hot parts or sparks from ignition. Never use gasoline as a cleaning agent.	


	<b>⚠ WARNING</b>
	Accidental Starts can cause severe injury or death. Disconnect and ground spark plug lead(s) before servicing.
Before working on engine or equipment, disable engine as follows: 1) Disconnect spark plug lead(s). 2) Disconnect negative (-) battery cable from battery. Do not allow children to operate generator.	

	<b>⚠ WARNING</b>
	Hot Parts can cause severe burns. Do not touch generator while operating or just after stopping.
Never operate generator with heat shields or guards removed. Do not modify generator. Place generator in a place where pedestrians or children are not likely to touch generator. Be sure to carry generator only by its carrying handles.	

	<b>⚠ CAUTION</b>
	Hazardous Voltage. Backfeed to utility system can cause property damage, severe injury, or death.
Never plug a portable generator directly into a building outlet. If generator is used for standby power, have a certified, licensed electrician install an automatic transfer switch to prevent inadvertent interconnection of standby and normal sources of supply. There is a permanent conductor between the generator (stator winding) and the frame.	

	<b>⚠ WARNING</b>
	Rotating Parts can cause severe injury. Stay away while generator is in operation.
Keep hands, feet, hair, and clothing away from all moving parts to prevent injury. Never operate generator with covers, shrouds, or guards removed.	

	<b>⚠ CAUTION</b>
	Electrical Shock can cause injury. Do not touch wires while engine is running.
Never operate generator in rain or snow. Never touch generator with wet hands or electrical shock may occur.	


	<b>⚠ WARNING</b>
	Cleaning Solvents can cause severe injury or death. Use only in well ventilated areas away from ignition sources.
Carburetor cleaners and solvents are extremely flammable. Follow cleaner manufacturer's warnings and instructions on its proper and safe use. Never use gasoline as a cleaning agent.	

<b>⚠ DANGER</b>	
Using a generator indoors <b>CAN KILL YOU IN MINUTES.</b> Generator exhaust contains carbon monoxide. This is a poison you cannot see or smell.	
	
NEVER use inside a home or garage, EVEN IF doors and windows are open.	Only use OUTSIDE and far away from windows, door, and vents.

# Specifications

## IDENTIFICATION NUMBERS

Kohler identification numbers (model, specification and serial) should be referenced for efficient repair, ordering correct parts, and engine replacement.

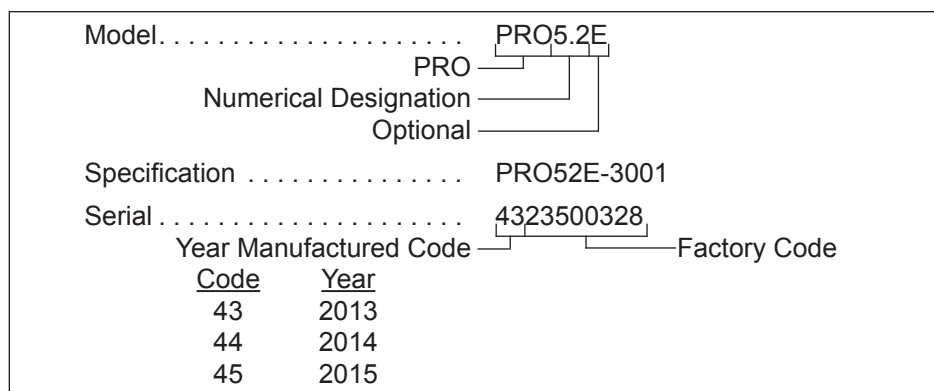

SPECIFICATIONS <sup>1</sup>	PRO 3.7/PRO 3.7 E	PRO 5.2/PRO 5.2 E	PRO 7.5/PRO 7.5 E
Overall Dimensions (L x W x H)	617 mm (24.3 in.) 478 mm (18.8 in.) 488 mm (19.2 in.)	670 mm (26.4 in.) 545 mm (21.5 in.) 535 mm (21.1 in.)	
Dry Weight	63 kg (138 lbs.)/ 70 kg (154 lbs.)	82 kg (180 lbs.)/ 91 kg (201 lbs.)	90 kg (199 lbs.)/ 100 kg (220 lbs.)
AC Rated Power	3000 (120 Volts x Watt 25.0 Amps) (240 Volts x 12.5 Amps)	4500 (120 Volts x Watt 37.5 Amps) (240 Volts x 18.8 Amps)	6300 (120 Volts x Watt 52.5 Amps) (240 Volts x 26.3 Amps)
AC Maximum Power	3700 (120 Volts x Watt 30.8 Amps) (240 Volts x 15.4 Amps)	5200 (120 Volts x Watt 43.3 Amps) (240 Volts x 21.7 Amps)	7500 (120 Volts x Watt 62.5 Amps) (240 Volts x 31.3 Amps)
DC Rated Power	100 Watt (12 Volts x 8.3 Amps)		
Fuel Tank	13.0 L (3.4 gal.)	30.2 L (8 gal.)	

<sup>1</sup> Values are in Metric units. Values in parentheses are English equivalents.

# Specifications




## TORQUE SPECIFICATIONS<sup>1</sup>

**PRO 3.7/PRO 3.7 E/PRO 5.2  
PRO 5.2 E/PRO 7.5/PRO 7.5 E**






Alternator Front Cover	53.5 N·m (474 in. lb.)
Alternator Rear Cover	4.5 N·m (40 in. lb.)
AVR and Brush Assembly	4.0 N·m (35 in. lb.)
Battery Mounting Bracket	
M6 Screws	9.9 N·m (87 in. lb.)
M8 Screws	25.0 N·m (221 in. lb.)
Carbon Canister Mounting Bracket	9.9 N·m (87 in. lb.)
Control Panel Back Cover	5.8 N·m (51 in. lb.)
Control Panel Electrical Components	
M3 Screws	1.3 N·m (11 in. lb.)
M4 Screws	2.9 N·m (26 in. lb.)
Control Panel	9.9 N·m (87 in. lb.)
Engine/Alternator Isolators	18.3 N·m (162 in. lb.)
Frame Assembly	
M6 Screws	11.5 N·m (102 in. lb.)
M10 Screws	30.0 N·m (266 in. lb.)
Fuel Tank Mounting	9.9 N·m (87 in. lb.)
Muffler Assembly	
M8 Screws	25.0 N·m (221 in. lb.)
M10 Screws	32.5 N·m (288 in. lb.)
Muffler Cover Assembly	9.9 N·m (87 in. lb.)
Rotor Assembly	22.0 N·m (195 in. lb.)
Stator Assembly	10.4 N·m (92 in. lb.)
Wire Connector	2.5 N·m (22 in. lb.)

<sup>1</sup> Values are in Metric units. Values in parentheses are English equivalents.

## GENERAL TORQUE VALUES

English Fastener Torque Recommendations for Standard Applications				
Bolts, Screws, Nuts and Fasteners Assembled Into Cast Iron or Steel				Grade 2 or 5 Fasteners Into Aluminum
Size	 Grade 2	 Grade 5	 Grade 8	
<b>Tightening Torque: N·m (in. lb.) ± 20%</b>				
8-32	2.3 (20)	2.8 (25)	—	2.3 (20)
10-24	3.6 (32)	4.5 (40)	—	3.6 (32)
10-32	3.6 (32)	4.5 (40)	—	—
1/4-20	7.9 (70)	13.0 (115)	18.7 (165)	7.9 (70)
1/4-28	9.6 (85)	15.8 (140)	22.6 (200)	—
5/16-18	17.0 (150)	28.3 (250)	39.6 (350)	17.0 (150)
5/16-24	18.7 (165)	30.5 (270)	—	—
3/8-16	29.4 (260)	—	—	—
3/8-24	33.9 (300)	—	—	—

Tightening Torque: N·m (ft. lb.) ± 20%				
5/16-24	—	—	40.7 (30)	—
3/8-16	—	47.5 (35)	67.8 (50)	—
3/8-24	—	54.2 (40)	81.4 (60)	—
7/16-14	47.5 (35)	74.6 (55)	108.5 (80)	—
7/16-20	61.0 (45)	101.7 (75)	142.5 (105)	—
1/2-13	67.8 (50)	108.5 (80)	155.9 (115)	—
1/2-20	94.9 (70)	142.4 (105)	223.7 (165)	—
9/16-12	101.7 (75)	169.5 (125)	237.3 (175)	—
9/16-18	135.6 (100)	223.7 (165)	311.9 (230)	—
5/8-11	149.5 (110)	244.1 (180)	352.6 (260)	—
5/8-18	189.8 (140)	311.9 (230)	447.5 (330)	—
3/4-10	199.3 (147)	332.2 (245)	474.6 (350)	—
3/4-16	271.2 (200)	440.7 (325)	637.3 (470)	—

Metric Fastener Torque Recommendations for Standard Applications						
Size	Property Class					Noncritical Fasteners Into Aluminum
	 4.8	 5.8	 8.8	 10.9	 12.9	
<b>Tightening Torque: N·m (in. lb.) ± 10%</b>						
M4	1.2 (11)	1.7 (15)	2.9 (26)	4.1 (36)	5.0 (44)	2.0 (18)
M5	2.5 (22)	3.2 (28)	5.8 (51)	8.1 (72)	9.7 (86)	4.0 (35)
M6	4.3 (38)	5.7 (50)	9.9 (88)	14.0 (124)	16.5 (146)	6.8 (60)
M8	10.5 (93)	13.6 (120)	24.4 (216)	33.9 (300)	40.7 (360)	17.0 (150)
<b>Tightening Torque: N·m (ft. lb.) ± 10%</b>						
M10	21.7 (16)	27.1 (20)	47.5 (35)	66.4 (49)	81.4 (60)	33.9 (25)
M12	36.6 (27)	47.5 (35)	82.7 (61)	116.6 (86)	139.7 (103)	61.0 (45)
M14	58.3 (43)	76.4 (56)	131.5 (97)	184.4 (136)	219.7 (162)	94.9 (70)

Torque Conversions	
N·m = in. lb. x 0.113	in. lb. = N·m x 8.85
N·m = ft. lb. x 1.356	ft. lb. = N·m x 0.737

# Troubleshooting


## TROUBLESHOOTING GUIDE

When troubles occur, be sure to check simple causes which, at first, may seem too obvious to be considered. For example, a starting problem could be caused by an empty fuel tank.





Some general common causes of generator troubles are listed below and vary by specification. Use these to locate causing factors.

Condition	Possible Cause	Solution
No AC output	Circuit breaker in OFF position.	Switch circuit breaker to ON.
	Circuit protector popped out.	Press circuit protectors.
	Engine not operating at rated RPM.	Adjust engine running at normal operating temperature to $3750 \pm 100$ RPM.
	Circuit breaker or receptacles faulty.	Test for voltage at circuit breaker and receptacles.
	Stator is faulty.	Test for voltage and resistance.
	Brushes are faulty.	Test for resistance between brushes and slip ring.
	AVR is faulty.	Test for voltage.
Low voltage at stator	Field polarity was lost.	Flash rotor field.
Alternator can't output rated power	Engine not operating at rated RPM.	Adjust engine running at normal operating temperature to $3750 \pm 100$ RPM.
	Overload condition.	Calculate electrical power required by electric appliances (in Watts). Reduce total wattage of connected electric devices within application range.
	Appliance is faulty.	Repair faulty appliance.


### Tests

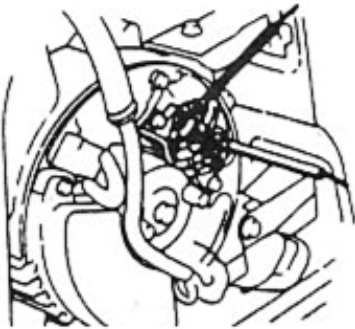Stator voltage		Remove rear cover and start engine with no load. Check if stator terminals have correct voltage.
----------------	-------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------

# Troubleshooting

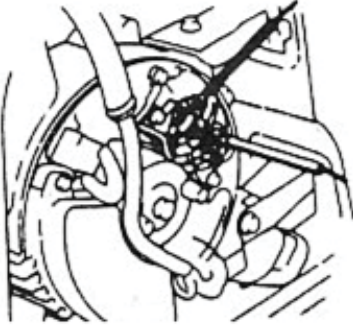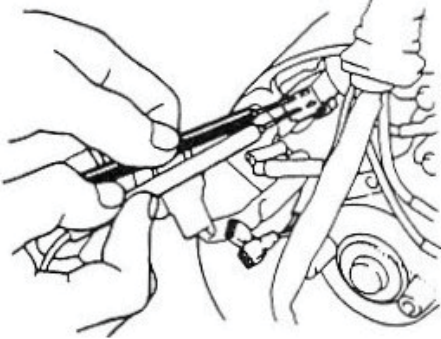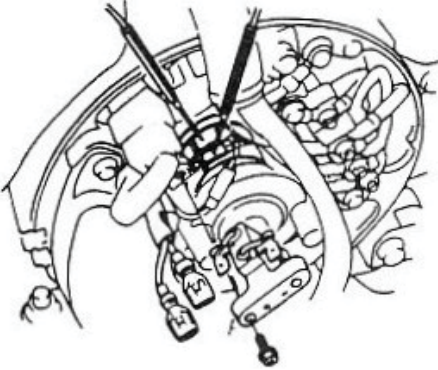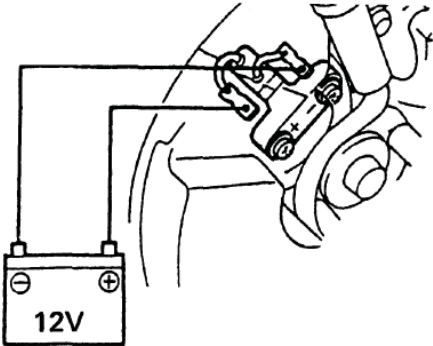Stator resistance		<p>With engine stopped, check main coil stator winding resistance between wires with ohmmeter or circuit tester. Replace if out of specification.</p>
		<p>With engine stopped, check exciting coil stator winding resistance between wires with ohmmeter or circuit tester. Replace if out of specification.</p>
Brush resistance		<p>With engine stopped, remove brush. Check brush and slip ring of rotor for resistance. Replace if out of specification.</p>
Flashing Field		<p>With engine stopped, momentarily touch the brush terminals with leads from a good 12 volt battery.</p>

## Troubleshooting

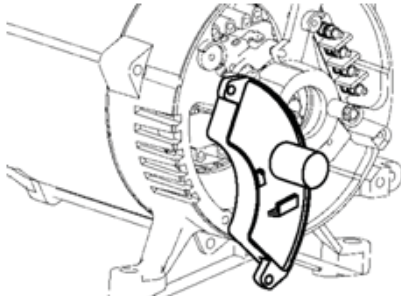
Replace AVR		<p>With engine stopped, replace AVR with a new AVR. Start engine and adjust trimmer on back of AVR. Test terminal voltage. Voltage should be between 95-135V. If voltage is met, original AVR is not adjusted properly or faulty. Replace as necessary. If voltage not met, check circuit breakers and receptacles.</p>
-------------	-----------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Unit	Item	Generator Specifications				REMARK
		GEN 5.0	PRO3.7/3.7E	PRO5.2/5.2E	PRO7.5/7.5E	
Main Winding	Red-Blue	0.37Ω±10%	0.40Ω±10%	0.27Ω±10%	0.13Ω±10%	Red-White (PRO 7.5 E)
	White-Black	0.37Ω±10%	0.40Ω±10%	0.27Ω±10%	0.13Ω±10%	
Field Winding	Between slip ring	47.9Ω±10%	41.0Ω±10%	46.6Ω±10%	56.4Ω±10%	
Exciter Winding	Blue-Blue	1.30Ω±10%	1.72Ω±10%	1.60Ω±10%	1.02Ω±10%	
DC Winding	Orange-Orange	-	0.11Ω±10%	0.10Ω±10%	0.08Ω±10%	
Brush	Length	9 mm				Service limit: 5 mm

NOTE: Alternator should not be in contact with panel, AVR, etc. during above resistance tests. Alternator should be tested at room temperature.




## PRO 3.7 & PRO 5.2 Wiring Diagram

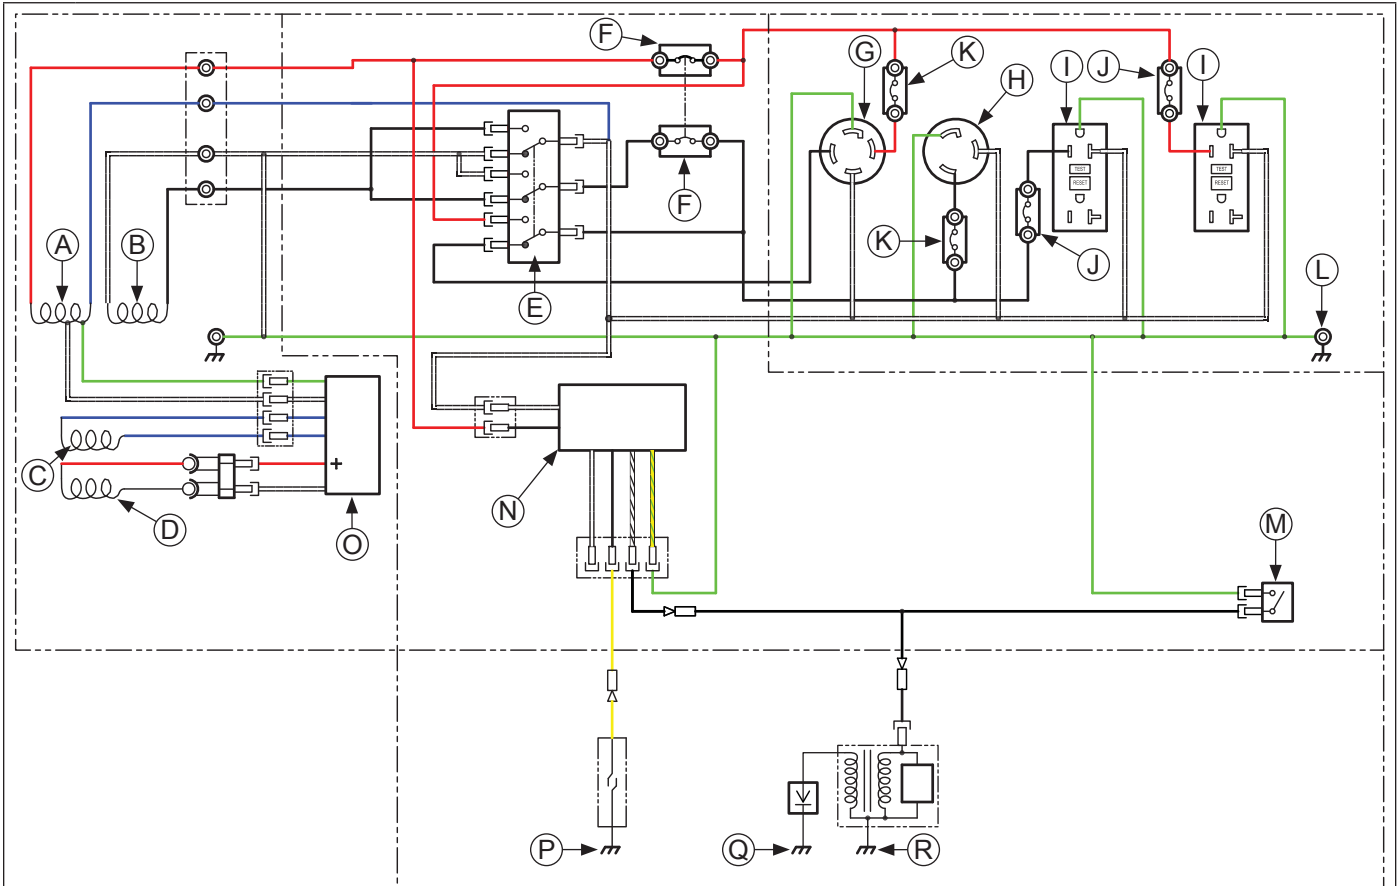

<b>A</b>	Main Winding 1	<b>B</b>	Main Winding 2	<b>C</b>	Exciter Field Coil	<b>D</b>	Sub Coil
<b>E</b>	Voltage Selector	<b>F</b>	Circuit Breaker	<b>G</b>	240/120V/30A Electrical Socket	<b>H</b>	120V/30A Electrical Socket
<b>I</b>	GFCI Receptacle	<b>J</b>	Circuit Protector 20A	<b>K</b>	Circuit Protector 30A	<b>L</b>	Ground Terminal
<b>M</b>	Engine Switch	<b>N</b>	Maintenance Minder	<b>O</b>	AVR	<b>P</b>	Oil Sentry™
<b>Q</b>	Spark Plug	<b>R</b>	Ignition Module				


# Electrical System

## PRO 3.7 E & PRO 5.2 E Wiring Diagram

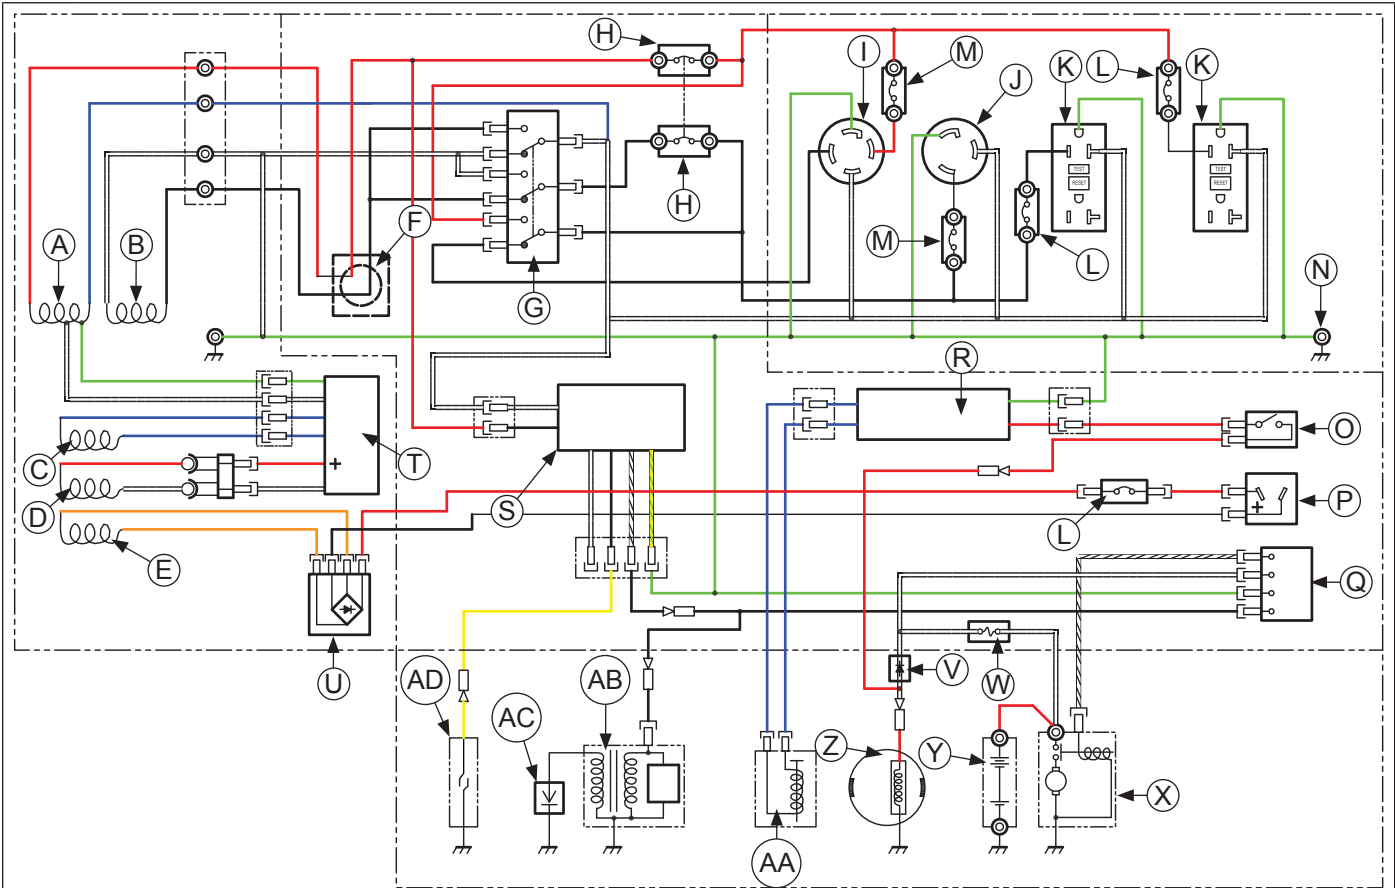

<b>A</b>	Main Winding 1	<b>B</b>	Main Winding 2	<b>C</b>	Exciter Field Coil	<b>D</b>	Sub Coil
<b>E</b>	DC Winding	<b>F</b>	Auto Idle Coil	<b>G</b>	Voltage Selector	<b>H</b>	Circuit Breaker
<b>I</b>	240/120V/30A Electrical Socket	<b>J</b>	120V/30A Electrical Socket	<b>K</b>	GFCI Receptacle	<b>L</b>	Circuit Protector 20A
<b>M</b>	Circuit Protector 30A	<b>N</b>	Ground Terminal	<b>O</b>	Auto Throttle Switch	<b>P</b>	12V DC Receptacle
<b>Q</b>	On/Off/Start Switch	<b>R</b>	Auto Idle Module	<b>S</b>	Maintenance Minder	<b>T</b>	AVR
<b>U</b>	Rectifier	<b>V</b>	Diode	<b>W</b>	Battery Fuse	<b>X</b>	Starter Motor
<b>Y</b>	12 Volt Battery	<b>Z</b>	Stator	<b>AA</b>	Electronic Throttle Control	<b>AB</b>	Ignition Coil
<b>AC</b>	Spark Plug	<b>AD</b>	Oil Sentry™				


## PRO 7.5 Wiring Diagram

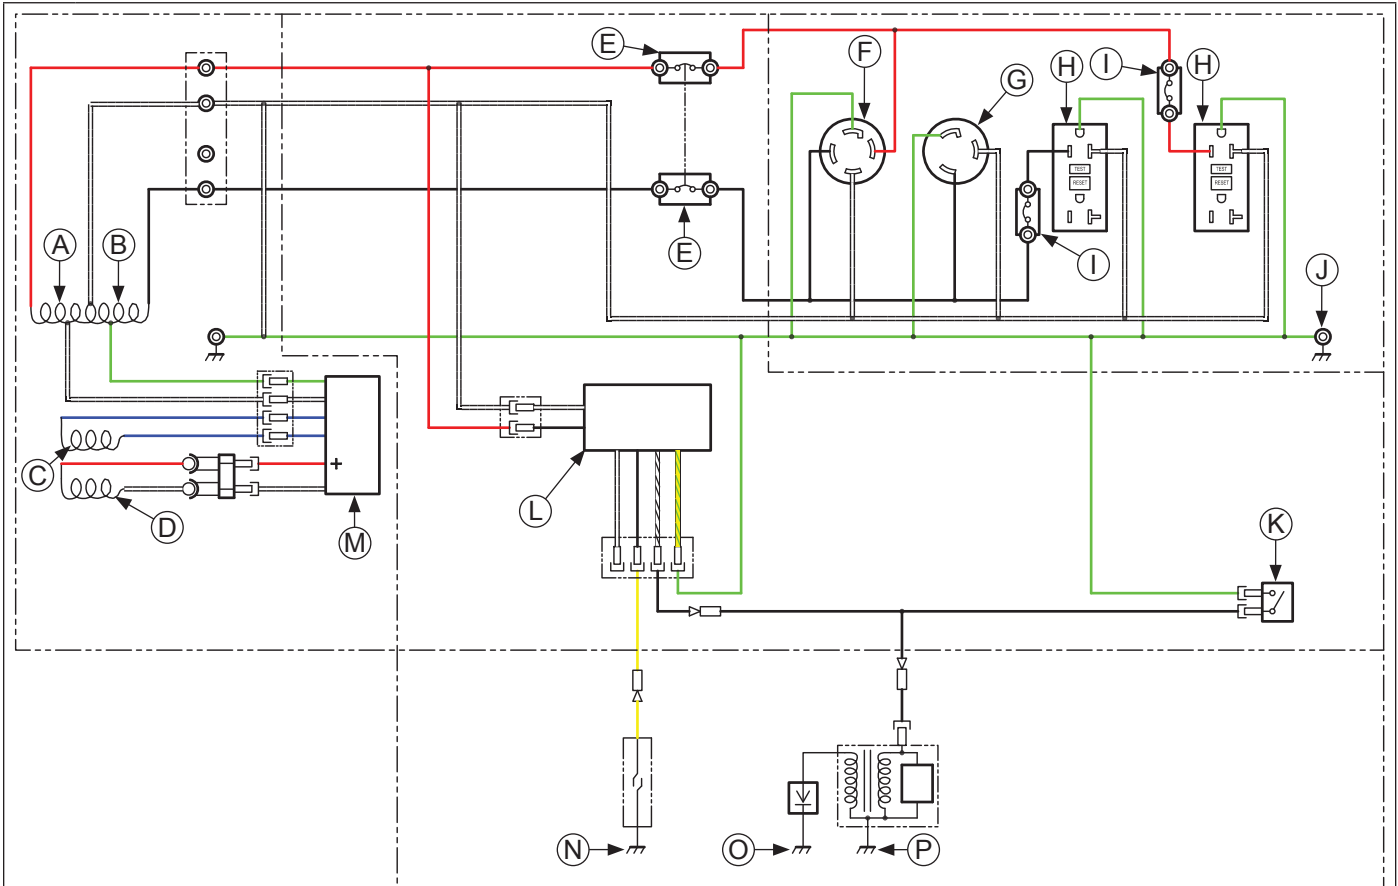




<b>A</b>	Main Winding 1	<b>B</b>	Main Winding 2	<b>C</b>	Exciter Field Coil	<b>D</b>	Sub Coil
<b>E</b>	Circuit Breaker	<b>F</b>	240/120V/30A Electrical Socket	<b>G</b>	120V/30A Electrical Socket	<b>H</b>	GFCI Receptacle
<b>I</b>	Circuit Protector 20A	<b>J</b>	Ground Terminal	<b>K</b>	Engine Switch	<b>L</b>	Maintenance Minder
<b>M</b>	AVR	<b>N</b>	Oil Sentry™	<b>O</b>	Spark Plug	<b>P</b>	Ignition Coil


# Electrical System
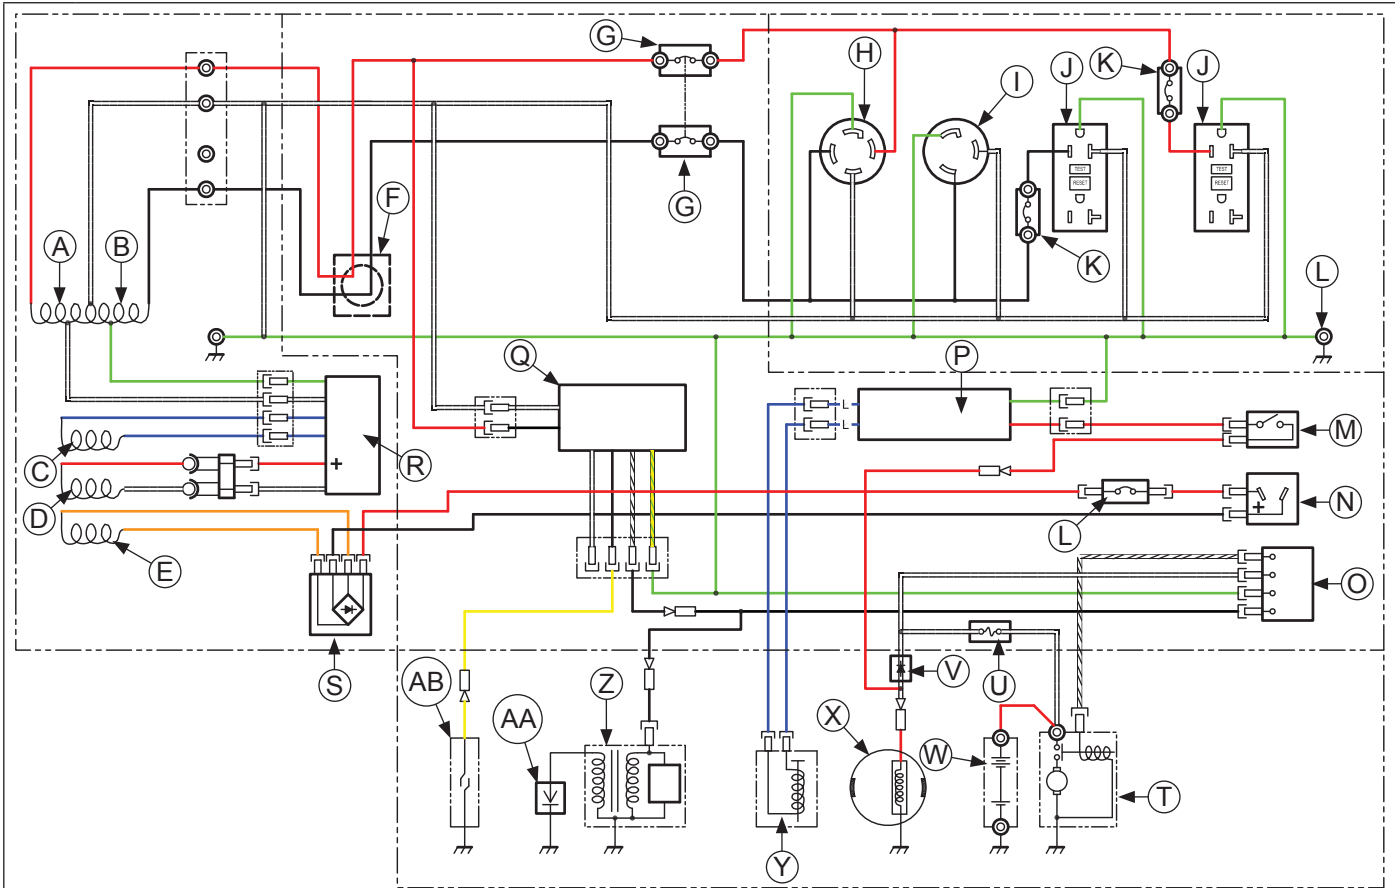
## PRO 7.5 E Wiring Diagram



<b>A</b>	Main Winding 1	<b>B</b>	Main Winding 2	<b>C</b>	Exciter Field Coil	<b>D</b>	Sub Coil
<b>E</b>	DC Winding	<b>F</b>	Auto Idle Coil	<b>G</b>	Circuit Breaker	<b>H</b>	240/120V/30A Electrical Socket
<b>I</b>	120V/30A Electrical Socket	<b>J</b>	GFCI Receptacle	<b>K</b>	Circuit Protector 20A	<b>L</b>	Ground Terminal
<b>M</b>	Auto Throttle Switch	<b>N</b>	12V DC Receptacle	<b>O</b>	On/Off/Start Switch	<b>P</b>	Auto Idle Module
<b>Q</b>	Maintenance Minder	<b>R</b>	AVR	<b>S</b>	Rectifier	<b>T</b>	Starter Motor
<b>U</b>	Battery Fuse	<b>V</b>	Diode	<b>W</b>	12 Volt Battery	<b>X</b>	Stator
<b>Y</b>	Electronic Throttle Control	<b>Z</b>	Ignition Coil	<b>AA</b>	Spark Plug	<b>AB</b>	Oil Sentry™

  	<b>⚠ WARNING</b>	<p>Before working on engine or equipment, disable engine as follows: 1) Disconnect spark plug lead(s). 2) Disconnect negative (-) battery cable from battery.</p> <p>Do not allow children to operate generator.</p>
	<p>Accidental Starts can cause severe injury or death.</p> <p>Disconnect and ground spark plug lead(s) before servicing.</p>	

	<b>⚠ CAUTION</b>
	<p>Electrical Shock can cause injury.</p> <p>Do not touch wires while engine is running.</p>
<p>Never operate generator in rain or snow.</p> <p>Never touch generator with wet hands or electrical shock may occur.</p>	

### Check Control Panel

Remove control panel from frame. Remove control box from control panel and check each components and wiring.

### Disassembly

1. Remove the end cover and disconnect wire terminals from wiring board.
2. Remove control panel.
3. After disconnecting individual wires, remove control panel components.


### Reassembly

NOTE: Circuit diagrams provide colored wires used for easy identification. To replace wires, use heat-resistant type wires (permissible temperature range 75°C (167°F) or over) and same gauge of wire that is removed.


1. Install receptacles, circuit breakers, sockets, switches, etc. on control panel.
2. Connect wires to control panel components.
3. Assemble wire terminals to wiring board.
4. Assemble end cover to rear cover. Torque screws to 4 N·m (35 in. lb.).
5. Attach control panel and control box to frame. Torque screws to 9.9 N·m (87 in. lb.).

# Disassembly/Inspection and Service

## PRO 3.7, PRO 3.7 E, PRO 5.2, PRO 5.2 E, PRO 7.5, & PRO 7.5 E Components

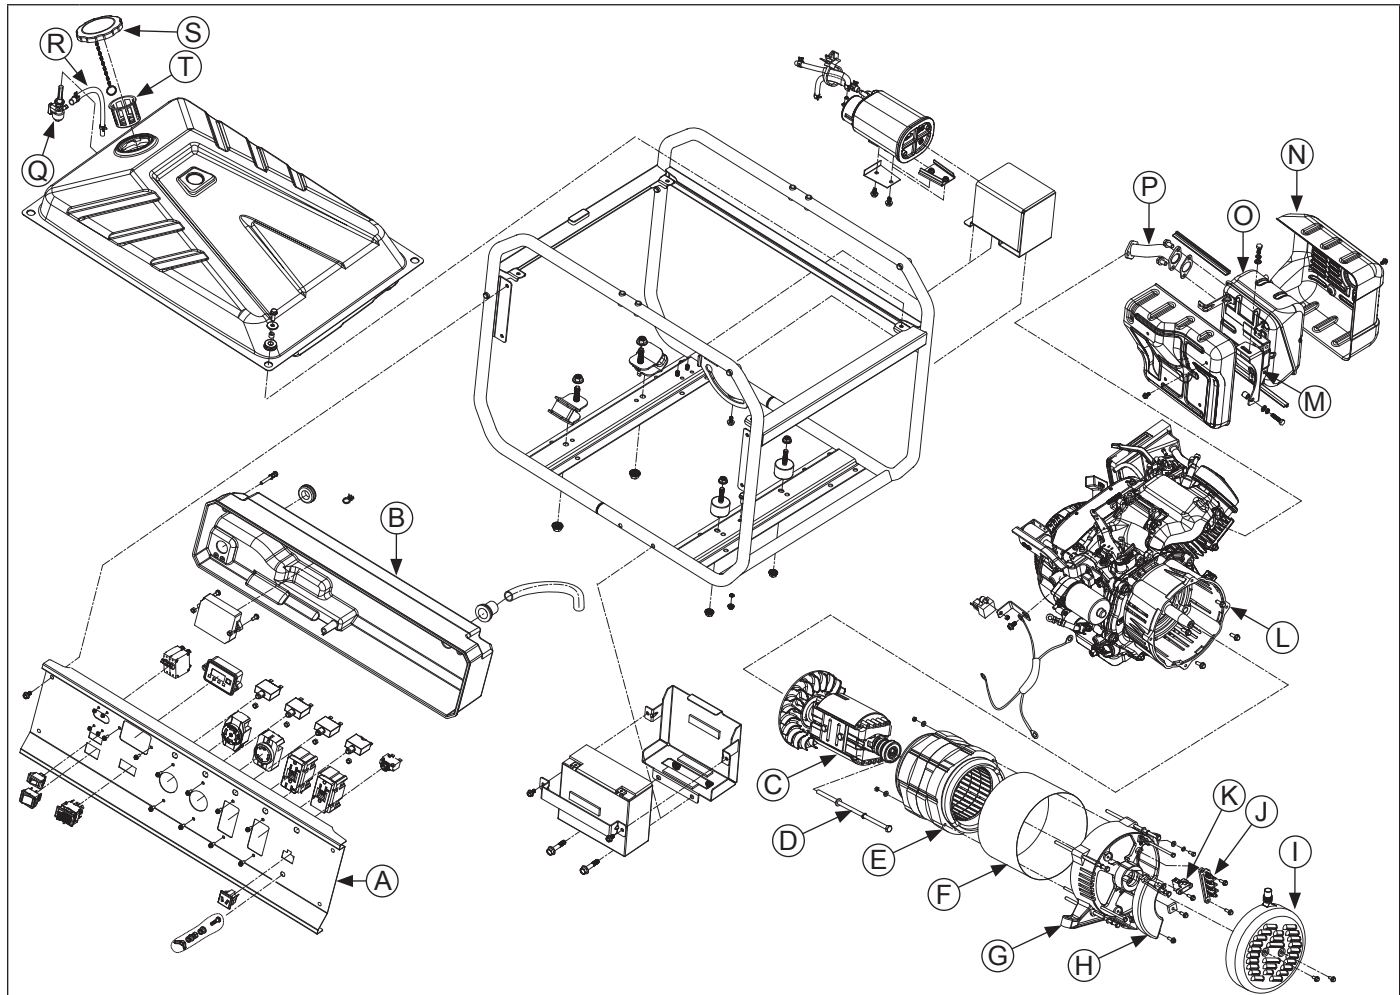

<b>A</b>	Control Panel	<b>B</b>	Control Box	<b>C</b>	Rotor	<b>D</b>	Through Bolt
<b>E</b>	Stator	<b>F</b>	Stator Cover	<b>G</b>	Rear Cover	<b>H</b>	AVR
<b>I</b>	End Cover	<b>J</b>	Wiring Board	<b>K</b>	Brush Holder	<b>L</b>	Front Cover
<b>M</b>	Muffler Bracket	<b>N</b>	Muffler Cover	<b>O</b>	Muffler	<b>P</b>	Exhaust Pipe
<b>Q</b>	Fuel Valve	<b>R</b>	Fuel Hose	<b>S</b>	Fuel Tank Cap	<b>T</b>	Fuel Filter

	<b>⚠ WARNING</b>	<p>Before working on engine or equipment, disable engine as follows: 1) Disconnect spark plug lead(s). 2) Disconnect negative (–) battery cable from battery.</p> <p>Do not allow children to operate generator.</p>
	<p>Accidental Starts can cause severe injury or death.</p> <p>Disconnect and ground spark plug lead(s) before servicing.</p>	

Be sure to memorize location of individual parts when disassembling generator so that generator can be reassembled correctly. Tag disassembled part with necessary information to facilitate easier and smoother reassembly.

For more convenience, divide parts into several groups and store them in boxes.

To prevent screws from being misplaced or installed incorrectly, replace them temporarily to their original position.

Handle disassembled parts with care; clean them before reassembly using a neutral cleaning fluid.

Remove battery before disassembling generator. (Electric start models).

Be sure to attach foam rubber linings inside covers on their original position when reassembling generator. When deformation or damage of foam rubber lining is found, replace it with new part. Failure to do so will result in poor performance and durability of generator.

Tie wires and fuel hoses using cable ties as they were in original configuration.


## Remove Fuel Tank

1. Close fuel valve and remove fuel hose from carburetor. Drain fuel into an approved container.
2. Disconnect fuel hose from fuel valve.
3. Remove screws from fuel tank, and remove fuel tank.

## Remove Muffler

1. Remove screws securing muffler cover, and muffler cover.
2. Remove screws for muffler bracket.
3. Remove screws securing exhaust pipe to engine, and remove muffler.

## Remove Control Panel

	<b>⚠ CAUTION</b>
	<p>Electrical Shock can cause injury.</p> <p>Do not touch wires while engine is running.</p>

NOTE: When removing wiring terminals from wiring board, it may be helpful to document the order.

1. Remove end cover.
2. Disconnect wire connections from alternator.
3. Remove wire terminals from wiring board.
4. Disconnect wiring from control panel to engine.
5. Remove screws securing control panel to frame.

6. To access inside control panel, remove screws securing control box to control panel.

## Remove AVR

1. Remove screws attaching AVR to rear cover and remove AVR unit.

## Remove Brush Holder

1. Remove screw attaching brush holder to rear cover and remove brush holder.

## Inspection

1. Inspect brushes for freedom of movement in brush holder.
2. Check continuity between each brush tip and its wire terminal.
3. Inspect brush-to-rotor contact surface for unusual wear or contamination.
4. Check brush free length. Replace the brush assembly if the length is less than 3/16 in.(5 mm).

## Remove Stator

NOTE: Take care not to damage stator coil and rotor coil when removing/installing them.

NOTE: Place stator core side down. Do not set stator on coil end. Coils may be damaged.

NOTE: It may be easier in some instances to tip generator set on a side. Ensure oil is drained from engine prior to doing this.

NOTE: Rear cover and stator are screwed together. Do not loosen or remove screws. Remove rear cover from stator after separated from alternator.

NOTE: Stator is heavy; be prepared to handle the weight to maneuver for inspection and service.

1. Remove nuts fixing rear cover onto rubber mounts.
2. Remove stator.
  - a. Remove stator and rear cover as an assembly.
  - b. Remove screws connecting rear cover and stator.
3. Remove rear cover.

## Remove Rotor


1. Remove through bolt of rotor.
2. Place a wooden block or similar material under rotor to support weight as rotor is removed.
3. With a rubber mallet, tap rotor a few times. Rotor should slide off engine shaft.

## Remove Front Cover

1. Remove screws and washers securing front cover, and remove front cover.

# Reassembly

## PRO 3.7, PRO 3.7 E, PRO 5.2, PRO 5.2 E, PRO 7.5, & PRO 7.5 E Components

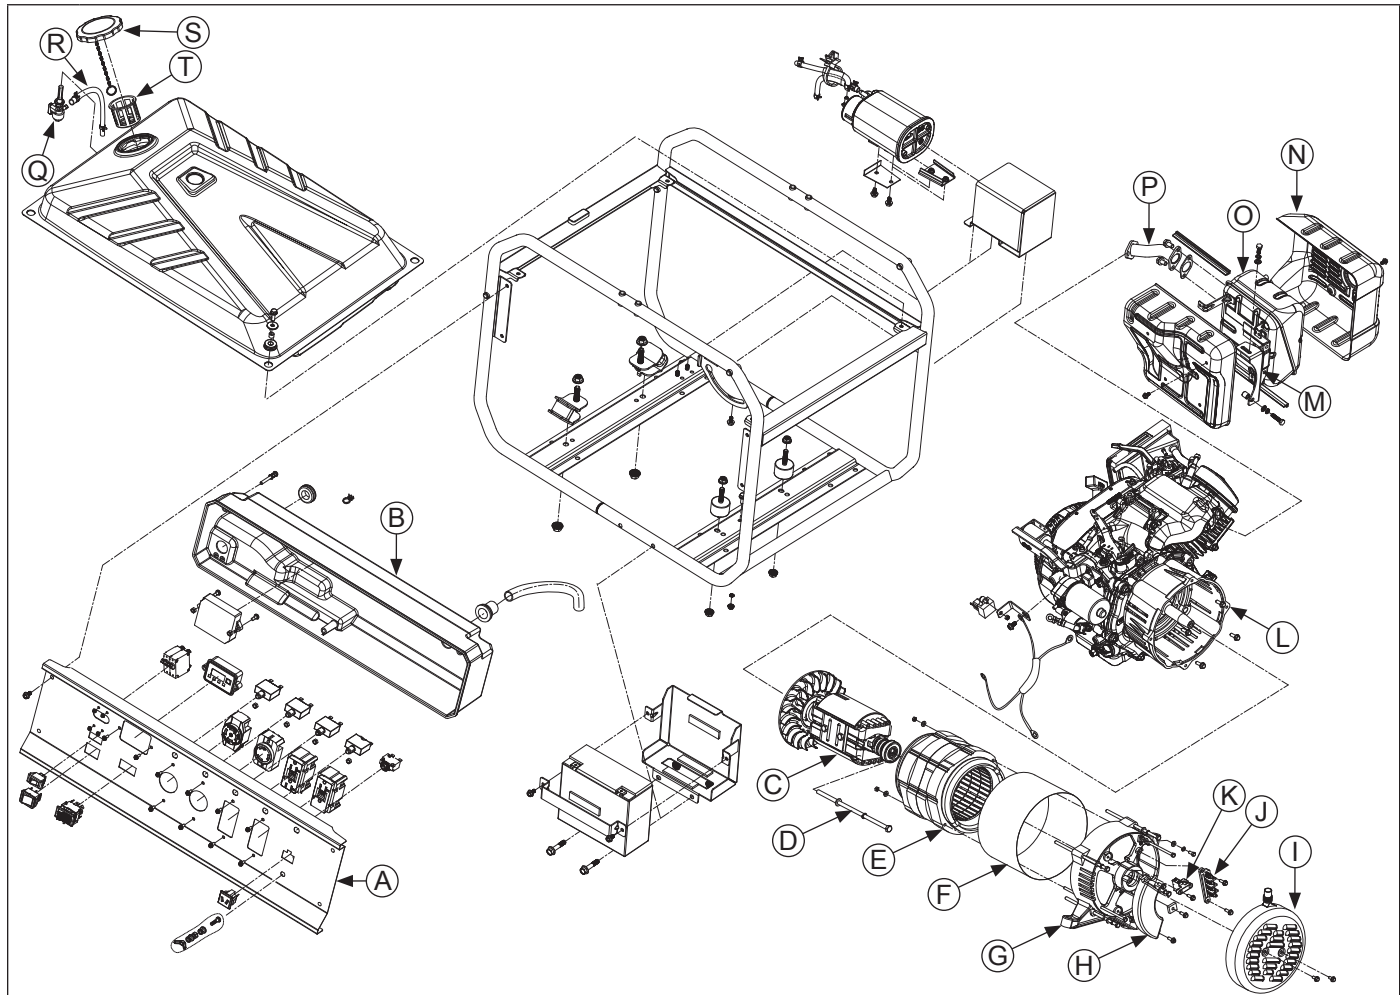

<b>A</b>	Control Panel	<b>B</b>	Control Box	<b>C</b>	Rotor	<b>D</b>	Through Bolt
<b>E</b>	Stator	<b>F</b>	Stator Cover	<b>G</b>	Rear Cover	<b>H</b>	AVR
<b>I</b>	End Cover	<b>J</b>	Wiring Board	<b>K</b>	Brush Holder	<b>L</b>	Front Cover
<b>M</b>	Muffler Bracket	<b>N</b>	Muffler Cover	<b>O</b>	Muffler	<b>P</b>	Exhaust Pipe
<b>Q</b>	Fuel Valve	<b>R</b>	Fuel Hose	<b>S</b>	Fuel Tank Cap	<b>T</b>	Fuel Filter



## Install Front Cover

---

1. Attach front cover to engine main bearing cover. Torque to 53.5 N·m (474 in. lb.).

## Install Rotor

---

NOTE: Before installing rotor make sure crankshaft taper and rotor are clean, dry, and completely free of any lubricants. Presence of lubricants can cause rotor to be over stressed and damaged when screw is torqued to specifications.

1. Mount rotor to engine shaft. Tighten through bolt.

## Install Stator

---

1. Assemble rear cover to stator and pull out stator wire harness through opening of rear cover.
2. Torque stator and rear cover screws to 10.4 N·m (92 in. lb.).
3. Press stator with rear cover evenly onto rotor. Tap with a rubber mallet to ensure rotor bearing is pressed into rear cover.
4. Tighten rear cover screws to front cover. Torque to 4.5 N·m (40 in. lb.).
5. Set rubber mount screws into rear cover. Do not tighten nuts at this moment.

## Install Brush Holder

---

NOTE: Install brush holder evenly onto rear cover using locating pin. If set incorrectly, damage may occur when tightened with screw or when generator is started.

1. Install brush holder. Torque screw to 4 N·m (35 in. lb.).

## Install AVR

---

1. Attach connectors to brush holder, AVR unit. Torque screws to 4 N·m (35 in. lb.).

## Install End Cover

---

1. Tighten earth (ground) wire (green) to rear cover with screw and washer.
2. Assemble earth (ground) wire between frame and rear cover rubber mount. Torque nuts to 18.3 N·m (162 in. lb.).
3. Assemble wire terminal to wiring board.
4. Assemble end cover to rear cover. Torque screws to 4 N·m (35 in. lb.).

## Install Muffler

---

1. Assemble muffler pipe and gasket to engine exhaust and snug screws.
2. Assemble muffler bracket to rear cover and snug screws.
3. Torque screws to:  
M8 25 N·m (221 in. lb.).  
M10 32.5 N·m (288 in. lb.).
4. Attach muffler cover to muffler. Torque to 9.9 N·m (87 in. lb.).

## Install Control Panel

---

1. Place control panel onto frame. Torque to 9.9 N·m (87 in. lb.).

## Install Fuel Tank

---

1. Mount fuel tank on frame. Torque nuts to 9.9 N·m (87 in. lb.).
2. Replace fuel hose to fuel valve.

Generator is now completely reassembled. Before starting or operating engine, be sure to follow steps below.

1. Make sure all hardware is tightened securely.
2. Turn on fuel supply.
3. Replace battery (if equipped).
4. Start generator following starting instructions.
5. Check for proper voltage at receptacles.







1P37 690 01



8 85612 30291 5